


中山市万胜智能科技有限公司
地 址：中山市小榄镇宝丰社区工业大道中45号厂房A(二期)6层之二
服 务 热 线：400-880-5030

Zhongshan Wansheng Intelligent Technology Co., LTD
Address: 2nd Floor, 6th Floor, Factory A(Phase II), No. 45, Industrial Avenue, Baofeng Community, Xiaolan Town, Zhongshan City
Service hotline: 400-880-5030

多功能熨烫机

Multi-functional ironing machine

使用说明书
Instruction Manual

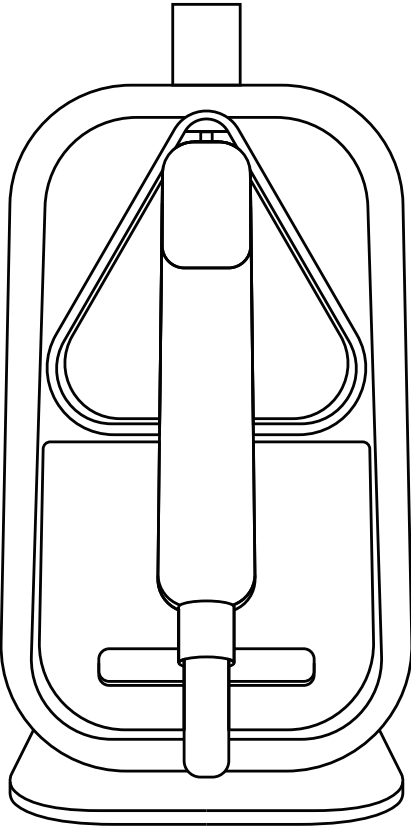

使用本产品前，请仔细阅读本使用说明书并妥善保管。
Before using this product, please read this user manual carefully and keep it properly.

产品执行标准：GB4706.1-2005;GB4706.2-2007 GB4343.1-2024;GB17625.1-2022
Product execution standard: GB4706.1-2005;GB4706.2-2007 GB4343.1-2024;GB17625.1-2022

目录

CATALOG

安全注意事项	01
产品参数	02
产品结构部件	03
产品使用说明	04
使用注意事项	06
产品维护方法	07
电路原理图	08
故障排除	09
环保清单	10
保修卡	12

01 安全及注意事项

使用之前，请全面地阅读使用说明书，并在操作时严格遵守。请新的使用者了解下列注意事项：

1. 请使用正确供电电压：220V~50Hz，连接不正确的电压可能损坏本机器。
2. 请勿在规定范围外使用本产品。
3. 不要与大功率电器共用一个供电插座使用。
4. 本产品使用时切勿让儿童、心智或残障人士靠近及使用。
5. 产品不得用于儿童玩耍。
6. 当产品处于通电状态及热态时，请小心看管。
7. 当产品跌落，或者电源线、插头、气管线有可见的损坏迹象而不能使用。为了确保使用的安全，切勿擅自更换，务必委托本公司的维修点或类似具有资格的人员来更换。
8. 使用本产品前必须先往水箱里注满水，使用过程中请注意观察水箱中的水量变化，及时往水箱中加水。
9. 请不要在水箱中加入热水或腐蚀性的任何液体。
10. 请不要直接对人、动物或穿在身体上的衣服进行熨烫。
11. 使用本产品时，切勿接触烫头底板、蒸汽，以免烫伤。
12. 使用本产品时，电源线远离发热表面，不允许电源线碰到发热表面。
13. 使用本产品时，电源线不要接触到尖锐物体，防止电源线损伤。如要把电源线拔离插座，必须用手握电源线插头将其拔出，切勿用拉电源线方法拔插头。
14. 在使用完本产品时，请按正确方法拔出电源插头。
15. 请确保本机器远离易燃物品及化学物品。
16. 请勿将熨斗头浸入水中。
17. 为防止漏电及其它危险，不使用及清洁前须关掉本机。
18. 初次使用时，产品可能存在少量残留水分溅出，此属正常现象，请放心使用。
19. 为防止热水溅出造成烫伤风险，使用时请保持电烫斗稳定，避免摇晃。


警告：

1. 如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换；若保险丝、电路板、发热系统等部件损坏或不能正常工作，同样需要专业人员更换。
2. 在电熨斗接通电源期间，使用者不得离开。
3. 在给水箱注水前必须将器具的电源软线的插头从插座上拔掉。
4. 电烫斗必须在稳定的表面上使用和搁置。
6. 如果电熨斗发生跌落、有可见的损坏迹象或有渗漏现象，则这个电熨斗不能使用。
7. 当使用器具时要注意防止蒸汽喷溅的危险。
8. 在补水和清洁时，应将电源插头拔掉。

02 产品参数

产品名称：多功能熨烫机	产品型号：LJ-G1501 LJ-G1502
额定电压：220V~	额定频率：50Hz
额定功率：1500W	水箱容量：1180ml
产品尺寸：280×165×340mm	

03 产品结构部件

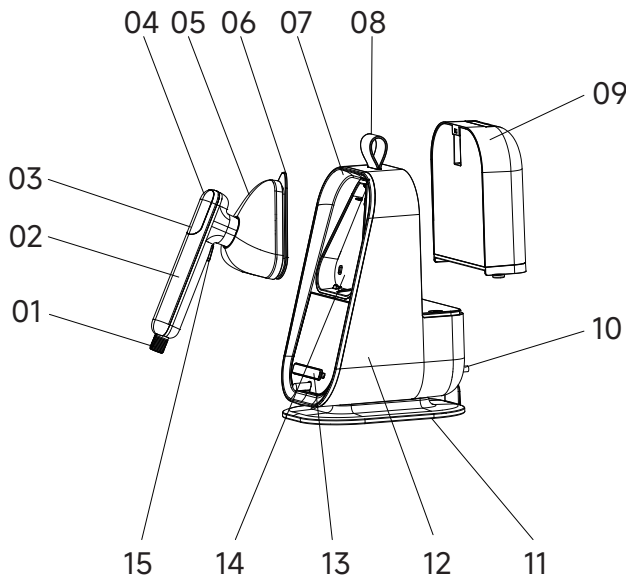


- | | | | |
|---------|---------|-----------|------------|
| 01.线尾套 | 05.喷头 | 09.水箱 | 13.水管电线收线盖 |
| 02.手柄上盖 | 06.烫板 | 10.电源线收缩盒 | 14.喷头固定板 |
| 03.功能键 | 07.主体面板 | 11.支撑底座 | 15.蒸汽开关 |
| 04.显示窗 | 08.吊带 | 12.主体上壳 | |

注：以上图片仅供参考，具体产品外观以及颜色，请以实物为准。
产品因人为造成损坏，本公司不承担任何更换，不作保修处理。


04 产品使用说明

1. 向上提取出水箱后往水箱入口加1180ml水，在加水过程中，请留意水箱口的水位变化，切勿注入过量的水，以免溢出。加完水后，把水箱安装回主体上。

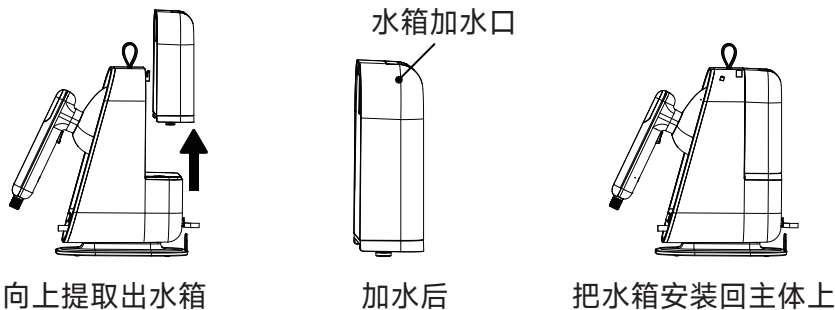

2. 按额定电压供电，并使用有接地线的电源，插上电源线面板上的六个档位图标及文字亮2秒，此时为待机状态，触摸功能按键则进入干烫档。

3. 取下烫头，触摸一下功能键，干烫档闪烁，机器进入预热状态，发热体工作，预热完成后干烫档常亮，进入干烫模式。

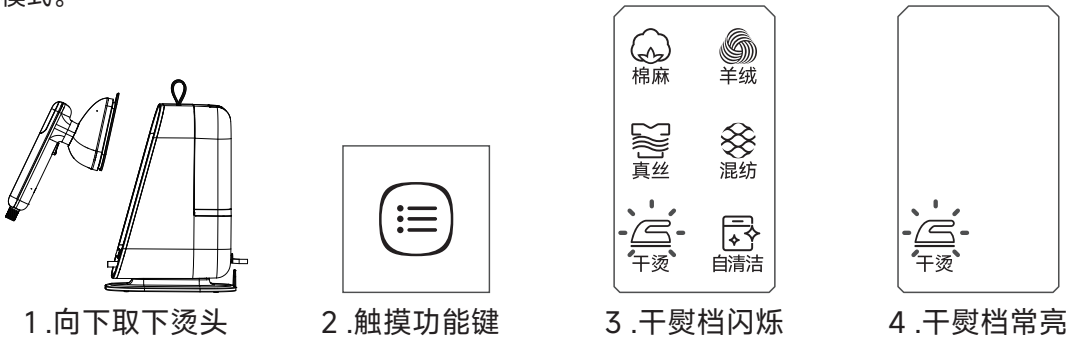

4. 蒸汽功能：

预热完成后，触摸一下功能键，棉麻档常亮；

再按一下手柄底下的轻触开关，水泵工作，烫头喷出蒸汽；

再按一下手柄底下的轻触开关，水泵停止工作，烫头停止喷出蒸汽；

同样操作，在预热完成后轻触功能键可以切换其它蒸汽档位，切换到当前蒸汽档位长亮，按了轻触开关档位喷蒸汽；在任意蒸汽档都可以轻触功能键来切换档位。

功能键的档位操作顺序是：干烫（开机）→棉麻→羊绒→真丝→混纺→干烫....以此循环。

5. 清洗功能：

预热完成后，在任一档位同时按住功能键和轻触开关3秒，清洗档常亮即进入清洗模式，水汽混合物喷出持续一分钟左右，然后等待15秒左右发热体蒸干内部残留水就整机进入待机状态；清洗功能启动后，单击一下轻触开关可以结束清洗功能，整机进入待机状态。

6. 缺水提示功能：

在蒸汽模式下，监测到水量不足水泵干抽时，灯光显示为跑马灯状态，需往水箱加水，蒸汽正常后即可解除缺水提示。

7. 保护功能：

机器持续10分钟内不进行任何操作，不按任何按键，则整机关机，机器回到待机状态。

8. 当机器处于任意工作的状态下，长按功能键，则整机停止工作，机器回到待机状态。

05 使用注意事项

1. 此款产品烫头出汽口温度比较高，最高可达到170℃，因此，在使用前请先确认衣物的物料特性，请勿长时间停留在同一位置，以免损坏衣物。

2. 在不使用此产品时，请用完水箱内的水，直至无蒸汽喷出后才可以关蒸汽开关后拔掉电源插头。（如果在烫头还有蒸汽喷出时，关闭蒸汽开关切断电源，此时发热锅里还剩余有水，加上发热锅还有余热，会不时有小蒸汽喷出，请不要喷头对着别人，避免造成蒸汽烫伤。）

3. 收纳前请将水箱的水倒掉或用完水箱内的水，直至机器无蒸汽喷出后才关闭蒸汽开关后拔掉电源插头，等产品冷却后再收纳。


06 产品维护方法

清洁：


- 1. 本机器的使用不需要添加任何洗涤剂。如果电线有损坏或者机器不能正常工作，请送回服务点维修。请勿试图自行拆卸修换。
- 2. 在清理本机之前，请关机把插头拔出并目待机身完全冷却。
- 3. 在使用完产品后，倒掉水箱内的水并使用产品直到没有蒸汽喷出为止。

收纳：

- 1. 将水管电线盒盖打开，将水管线卷成整齐的圆形，小心地放入盒内，注意避免挤压。确认无误后，再将盒盖关紧。

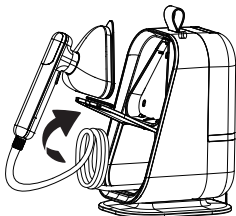


打开水管电线盒盖

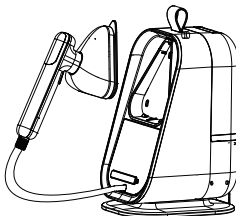

关闭水管电线盒盖

- 2. 将电源线盒盖打开，将电源线有序地对折，使用宽松的束线带进行固定。严禁使用金属丝等锐利材料捆扎，将整理好的电源线轻轻地放入线盒内，注意避免挤压。确认无误后，再将盒盖关紧。

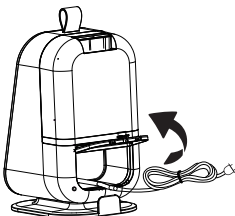

打开电源线盒盖




关闭电源线盒盖

保养：

- 1. 请勿把本机器放入水中，请用干布擦干机身外，无需用特别的清洁剂去清洗。长时间使用后，如出汽面板有异物，关机拔掉插头并待机器冷却后，使用湿布擦净即可。
- 2. 确保本机在储存或包装前保存干燥。

07 电路原理图

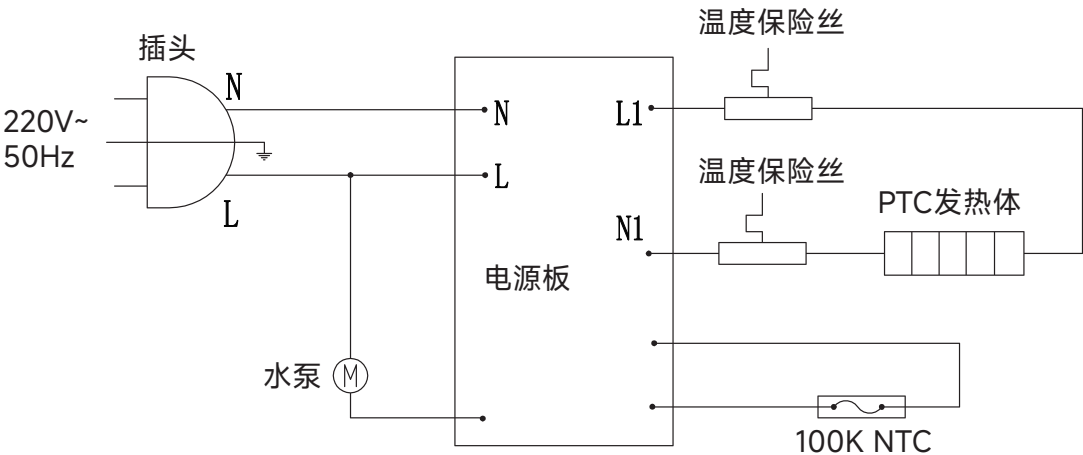

08 故障排除

故障描述	可能的原因分析	故障的处理方法
完全不工作指示灯不亮	电源线插头未插在电源上	将电源线插头插进带电插座
	电源板已损坏	请专业人员检查维修
本机不能喷出蒸汽， 但指示灯亮	水箱没有加水	将水箱中注入适量的水
	热熔断器损坏	请专业人员检查维修
	恒温器损坏	
烫头底板发热可正常使用， 指示灯不亮	指示灯坏了	请专业人员检查维修
蒸汽量过少	电压过低	请避免在用电高峰时段使用本产品
烫头喷水	开机有小量水喷出	属于正常现象，约一分钟后消失
	发热锅不工作	请专业人员检查维修
水箱漏水	水箱破裂	把水箱里的盖子压紧，透气孔 保持在顶部
		请专业人员检查维修
整机漏水	机里的水管道损坏	请专业人员检查维修
水箱变形	使用时加入高温热水	请专业人员检查维修

△如遇到无法解决问题时，请与本公司联系或请专业人员维修，切勿自行拆卸。

09 环保清单

产品中有毒有害物质或元素的名称及含量						
部件名称	铅 及其他合物 (Pb)	汞 及其他合物 (Hg)	镉 及其他合物 (Cd)	六价铬 及其他合物 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑料组件	○	○	○	○	○	○
温控器	○	○	○	○	○	○
保险丝	○	○	○	○	○	○
PCB线路板	×	○	○	○	○	○
密封圈	○	○	○	○	○	○
发热体	○	○	○	○	○	○
螺丝	○	○	○	○	○	○
包材资料	○	○	○	○	○	○
塑料袋	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制。
○：表示该有害物质在该部件所有均质材料中含量均在GB/T 26572规定的限量要求以下。
X：表示该有害物质至少在该部件的某一均质材料中含量超过GB/T 26572规定的限量要求。
备注：以上“x”的部件中，部分含有有害物质超过是由于目标前行业技术水平所限，暂时无法实现代替或减量化。



环保使用期限10年：
表示本产品中含有的有害物质不会发生外泄或突变，用户在产品说明书所述情况下正常使用本产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

箭头循环标志：
表示本产品可回收利用。超过使用期限或经过维修无法正常工作后，不应被随意丢弃，请交由正规回收渠道以及有废弃电器电子产品处理资格的企业处理，正确的处理方法请查阅国家或当地有关旧电器电子产品的处理规定。

以上标识均依据中国有害物质限制使用管理办法及其配套标准SJ/T11364要求执行本产品长期使用不会对人体产生危害，请放心使用。

10 保修卡

- 服务承诺
- 感谢您购买本公司产品，为维护您的合法权益，请填写您的真实资料，并妥善保存此保修卡。
1. 保证产品质量符合出厂要求。
 2. 本产品实行整机保修，保修期为一年，起始日期自开具产品发票或购物凭证之日起计算。
 3. 保修期内，按照使用说明及机体帖附标签使用而发生故障的产品，请顾客凭已填好的保修卡及购物凭证到指定维修点免费维修。
 4. 保修期内产品须凭保修卡和机身编号进行保修，保修卡遗失不补。
 5. 请妥善保存购机发票或凭证。

- 以下情况恕不免费维修
- 无保修卡及有效发票或购物凭证
 - 未按说明书的要求操作机器所引发的故障
 - 由于自然灾害或异常电压所引发的故障
 - 人为撕毁机身编号或不能提供机身编号
 - 发票型号与维修产品型号不符或有涂改
 - 使用不当，私自修理或改造所引发的故障
 - 人为或运输过程中，人为损坏等原因造成的机器损坏

相关信息（用户填写）	
用户姓名	
购买商店	购买日期
产品名称	产品型号
产品编号	
维修记录	
维修日期	
维修内容及维修情况	
维修单位	
维修人员	

CATALOG

Safety and Precautions	13
Product Specifications	14
Product structural components	15
Instruction Manual	16
Usage Notes	18
Product maintenance method	19
Circuit schematic diagram	20
Troubleshooting	21
Environmental protection list	22
Environmental protection list	24

01 Safety and Precautions

Before use, please read the user manual thoroughly and strictly follow the instructions. For new users, please be aware of the following precautions:

- 1. Use the correct power supply voltage: 220V - 50Hz. Using an incorrect voltage may damage the machine.
- 2. Do not use the product outside the specified range.
- 3. Do not share the power socket with high-power electrical appliances.
- 4. Do not allow children, people with mental or physical disabilities to approach or use the product.
- 5. The product must not be used for children's play.
- 6. When the product is powered on and in a hot state, please be cautious and supervise.
- 7. When the product falls or there are visible signs of damage to the power cord, plug, or gas line, it cannot be used. To ensure the safety of use, do not replace it, and be sure to entrust the maintenance point of our company or similar qualified personnel to replace it.
- 8. Before using this product, fill the water tank with water first. During use, please pay attention to observing the changes in the water level in the water tank and add water in time.
- 9. Do not add hot water or any corrosive liquid to the water tank.
- 10. Do not directly iron people, animals, or clothes on the body.
- 11. When using this product, do not touch the heating base plate or steam to avoid burns.
- 12. When using this product, keep the power cord away from the heated surface and do not allow the power cord to touch the heated surface.
- 13. When using this product, do not let the power cord come into contact with sharp objects to prevent damage to the power cord. If you need to remove the power cord from the socket, hold the power cord plug with your hand and pull it out. Do not pull the power cord to remove the plug.
- 14. When using this product, pull out the power plug in the correct way.
- 15. Ensure that the machine is away from flammable and chemical substances.
- 16. Do not immerse the iron head in water.
- 17. To prevent electric leakage and other dangers, turn off the machine before using and cleaning.

- 18. There may be a small amount of residual water splashing out,When used for the first time,which is a normal . Please use it with confidence.
- 19. To prevent the hot water from spilling and causing scalding risks, please keep the steamer stable and do not shake the steamer head.


Warning

- 1. If the power cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or a similar unit:
If components such as fuses, circuit boards, heating systems, etc. are damaged or do not function properly, professional replacement is also required.
- 2. During the operation of the iron, the user must not leave.
- 3. Before filling the water tank, the power cord plug of the appliance must be unplugged from the socket.
- 4. The ironing iron must be used and placed on a stable surface.
- 5. When placing the ironing iron on its base, ensure that the base is placed on a stable surface.
- 6. If the ironing iron has fallen, shows visible damage signs or has leakage, then this ironing iron cannot be used.
- 7. When using the appliance, be careful to avoid the danger of steam splashing.
- 8. When refilling water and cleaning, the power plug must be unplugged.

02 Product Specifications

Product name:Multi-functional ironing machine	Product model:LJ-G1501 LJ-G1502
Rated voltage:220V~	Rated power:1500W
Rated frequency:50Hz	Water tank capacity:1180ml
Product size:280×165×340mm	

03 Product structural components

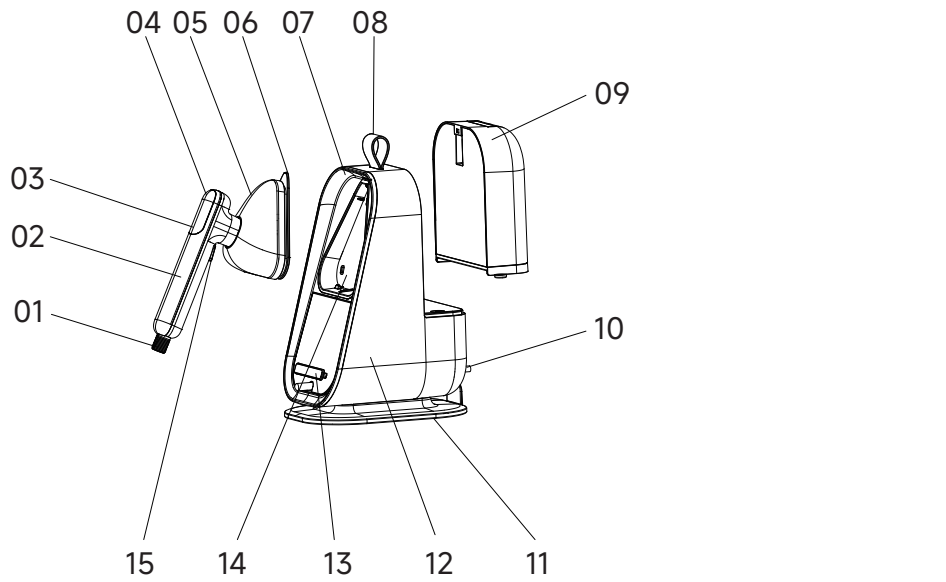


- 01.Tail cap of the wire
- 02.Handle cover
03. Function key
04. Display window
- 05.Steamer
- 06.Ironing plate
- 07.Main panel
- 08.Suspension strap
- 09.Water tank
- 10.Power cord storage box
- 11.Support base
12. Main upper cover
- 13.Wire and cable reel cover for the pipe
- 14.Spray head fixing plate
- 15.Steam switch

Note: The above pictures are for reference only. For the specific appearance and color of the product, please refer to the actual item.
The company will not undertake any replacement or provide warranty for damages caused by human factors.


04 Instruction Manual

1. Remove the water tank upwards and add 1180ml of water to the water tank inlet. During the water filling process, pay attention to the water level change at the tank opening. Do not inject excessive water to avoid overflow. After filling the water, reinstall the water tank onto the main body.

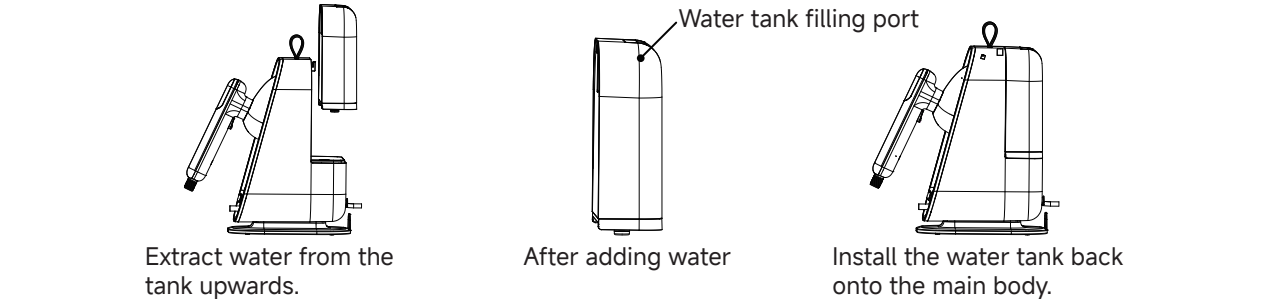

2. Supply power at the rated voltage and use a power source with an earth wire. Press the six position icons and text on the power plug panel for 2 seconds. At this point, it is in the standby mode. Press the function buttons to enter the fully dry mode.

3. Remove the steamer.,Touch the function key. The "Dry" indicator light flashes, indicating that the machine is in the preheating state. The heating element starts working. After the preheating is complete, the "Dry" indicator light remains on, and the machine enters the dry styling mode.

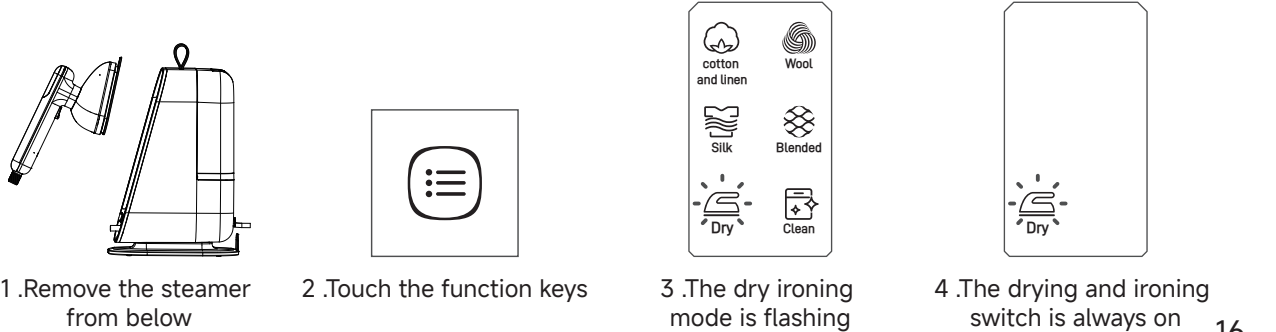

4.Steam Function:

After preheating is completed, touch the function key. The cotton and linen mode will remain constantly illuminated. Press the touch switch at the bottom of the handle once again. The water pump will start working, and the steam head will spray steam.

Press the touch switch at the bottom of the handle once more. The water pump will stop working, and the steam head will stop spraying steam.

By following the same procedure, after preheating is completed, touching the function key lightly can switch to other steam modes. When the current steam mode is long-illuminated, pressing the touch switch will activate the mode for spraying steam. In any steam mode, touching the function key lightly can switch the mode.

The sequence of operation for the function keys is: dry steaming (power on) → cotton and linen → wool → silk → blended → dry steaming...

This cycle repeats.

5. Cleaning Function:

After preheating is completed, simultaneously press the function key and the touch switch on any mode for 3 seconds. The cleaning mode will be constantly illuminated, entering the cleaning mode. A mixture of water and steam will be sprayed for about one minute, then wait for about 15 seconds. After the heating body dries the remaining water, the entire machine will enter the standby state: After the cleaning function is activated, clicking the touch switch once can end the cleaning function and the machine will enter the standby state.

6. Water Level Low Warning Function:

In the steam mode, when the water level is insufficient and the water pump stops pumping, the light will display in a flashing lamp state. You need to add water to the water tank. Once the water level is normal, the water level low warning will be removed.

7. Protection Function:

If the machine does not perform any operation or press any button for 10 minutes, the machine will turn off and return to the standby state.

8. When the machine is in any working state, if you long-press the function key, the entire machine will stop working and return to the standby state.

05 Usage Notes

1.The steam outlet of this product has a relatively high temperature, reaching up to 170°C. Therefore, before using it, please confirm the material properties of the clothing. Do not stay in the same position for a long time to avoid damaging the clothing.

2. When not using this product, please empty the water in the water tank until no steam is sprayed out before turning off the steam switch and unplugging the power plug. (If there is still steam spraying from the steam outlet when turning off the steam switch and cutting off the power, there is still water remaining in the heating pot and the heating pot still has residual heat. There may be intermittent small steam sprays. Do not point the nozzle at others to avoid steam burns.

3. Before storing, please drain the water from the water tank or use up the water in the water tank until no steam is sprayed out before turning off the steam switch and unplugging the power plug. Wait for the product to cool down before storing.


06 Product maintenance method

Cleaning


1. The use of this machine does not require the addition of any detergent. If the wires are damaged or the machine does not work properly, please send it back to the service center for repair. Do not attempt to disassemble and repair it yourself.
2. Before cleaning this machine, please turn it off, unplug the plug, and wait for the body to cool completely.
3. After using the product, drain the water from the water tank and continue using the product until no steam is emitted.

Storage

1. Open the cover of the water pipe and wire box, roll the water pipe and wire into a neat circle, carefully place it inside the box, be careful not to squeeze it. After confirming there are no errors, then close the box cover tightly.

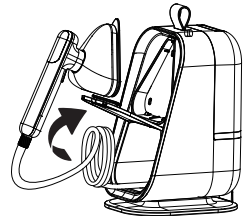


Open the cover of the water pipe junction box

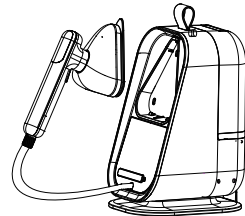

Close the cover of the water pipe and electrical box

2. Open the power cable box cover, fold the power cable neatly and orderly, and fix it with a loose cable tie. Do not use sharp materials like metal wires for bundling. Gently place the neatly arranged power cable into the box, avoiding any squeezing. After confirming there are no errors, close the box cover tightly.

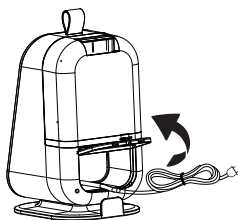

Open the cover of the power cable box




Close the cover of the power cable box

Maintenance

1. Do not immerse this machine in water. Please dry the exterior of the machine with a dry cloth. No special cleaning agent is required to clean it. Wash. After prolonged use, if there are foreign objects on the exhaust panel, turn off the machine, unplug the plug, let the machine cool down, and then wipe it clean with a damp cloth.
2. Ensure that this machine is kept dry before storage or packaging.

07 Circuit schematic diagram

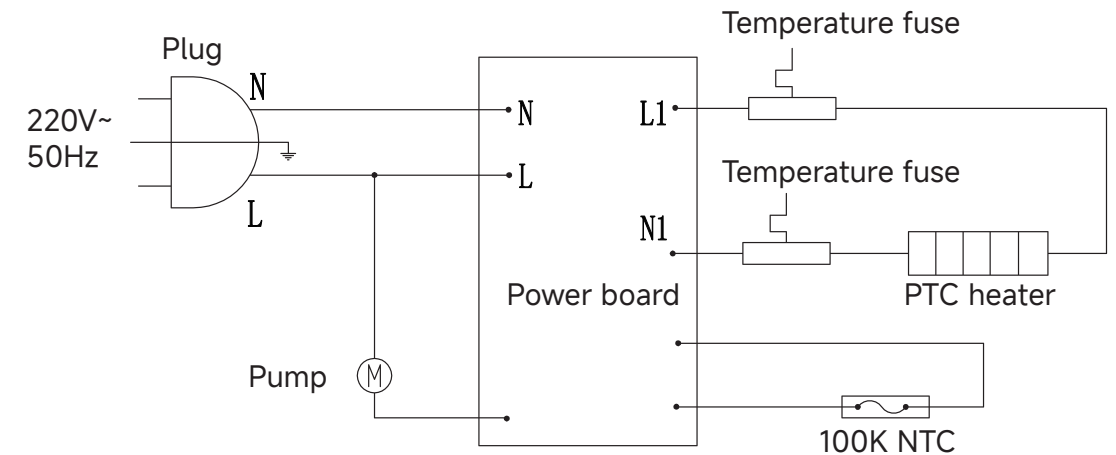

08 Troubleshooting

Fault description	Possible cause analysis	Troubleshooting methods
The "no operation" indicator light is not on.	The power cord plug is not plugged into the power source.	Plug the power cord plug into an electrical socket.
	The power board is damaged	Have a professional inspect and repair.
This machine cannot produce steam but the indicator light is on	The water tank is not filled with water.	Inject an appropriate amount of water into the water tank.
	The thermal fuse is damaged	Have a professional inspect and repair.
	The thermostat is damaged	
The heating base plate can operate normally but the indicator light is not on.	The indicator light is broken	Have a professional inspect and repair.
Insufficient steam output.	Low voltage	Please avoid using this product during peak electricity consumption periods
Steam head sprays water	A small amount of water spurts out when the machine is turned on	This is a normal phenomenon and will disappear in about one minute.
	The heating pot does not work	Have a professional inspect and repair.
Water tank leaks.	The water tank is cracked.	Press the cover of the water tank tightly and keep the ventilation hole at the top.
		Have a professional inspect and repair.
The entire machine leaks water	The water pipes inside the machine are damaged	Have a professional inspect and repair.
The water tank is deformed	Add hot water when using	Have a professional inspect and repair.

△If you encounter problems that cannot be solved, please contact our company or have professional personnel repair it. Do not disassemble it yourself.

09 Environmental protection list

The names and contents of toxic and harmful substances or elements in the product						
Component name	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Plastic component	○	○	○	○	○	○
Thermostat	○	○	○	○	○	○
Fuse	○	○	○	○	○	○
PCB circuit board	×	○	○	○	○	○
Sealing ring	○	○	○	○	○	○
Heating element	○	○	○	○	○	○
Screw	○	○	○	○	○	○
Packaging material information	○	○	○	○	○	○
Plastic bag	○	○	○	○	○	○

This form is prepared in accordance with the provisions of SJ/T11364.
O: This indicates that the content of the hazardous substance in all homogeneous materials of this component is below the limit requirements stipulated in GB/T 26572.
X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements stipulated in GB/T 26572.
Note: Among the components marked with "x" above, some contain more than enough harmful substances. This is due to the limitations of the technical level of the industry before the target, and it is temporarily impossible to replace or reduce them.



Environmentally friendly usage period: 10 years

The period during which the harmful substances contained in this product will not be leaked or mutated, and the normal use of this product by the user under the circumstances described in the product manual will not cause serious pollution to the environment or serious damage to the user's personal or property.

Arrow loop logo

This indicates that the product is recyclable. After exceeding the service life or being unable to work properly after repair, they should not be discarded at will. Please hand them over to regular recycling channels and enterprises with the qualification to handle waste electrical and electronic products for disposal. For the correct disposal methods, please refer to the relevant national or local regulations on the disposal of used electrical and electronic products.

All the above labels are in accordance with the requirements of the "Measures for the Restriction of the Use of Hazardous Substances in China" and its supporting standard SJ/T11364. Long-term use of this product will not cause harm to the human body. Please use it with confidence.

10 Warranty card

Service Commitment

Thank you for purchasing our company's products. To safeguard your legitimate rights and interests, please fill in your real information and keep this warranty card properly.

1. Ensure that the product quality meets the factory requirements.
2. This product is covered by a one-year warranty for the entire machine, starting from the date of issuance of the product invoice or shopping voucher.
3. During the warranty period, for products that malfunction due to use in accordance with the instructions and the labels attached to the machine body, customers are requested to bring the completed warranty card and shopping vouchers to the store
Free repair at designated service points.
4. During the warranty period, the product must be repaired with the warranty card and the body number.
Lost warranty cards will not be reissued.
5. Please keep the invoice or voucher for purchasing the machine properly.

The following situations will not be repaired free of charge

- No warranty card, valid invoice or shopping voucher
- The invoice model does not match the model of the repaired product or has been altered
- Faults caused by not operating the machine in accordance with the requirements of the manual
- Faults caused by improper use, private repair or modification
- Faults caused by natural disasters or abnormal voltages
- Machine damage caused by human factors or during transportation, such as human damage
- Human tearing of the body number or inability to provide the body number

Relevant information (filled in by the user)	
User Name	
Purchase store	Purchase date
Product Name	Product model
Product Number	
Maintenance record	
Repair date	
Maintenance content and maintenance conditions	
Maintenance unit	
Maintenance perso	